

Outdoor Fixtures

Models: 326926, 326932, TPFW70050LWH, TPFW110050LWH

LED Ceiling Fixture

120VAC / 60Hz

Safety Precautions

Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.

It is recommended that a qualified electrician perform all wiring. This fixture must be wired in accordance with all national and local electrical codes.

Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.

This fixture is designed for use in a 110-120VAC, 60Hz fused circuit. Do not use on a dimming circuit.

To reduce the risk of electrical shock, and to assure proper operation, this fixture must be adequately grounded. To accomplish proper grounding, there must be a separate ground wire (green) contact between this fixture and the ground connection of your main power supply panel.

This fixture is intended to be used for general outdoor lighting in dry or damp locations only.

ASSEMBLY INSTRUCTIONS

1. Preparing for installation

A. **Disconnect electrical power** at fuse or circuit breaker box before installing or servicing any part of this fixture.

B. Carefully remove the fixture from the carton, and check that all parts are included, as shown in figure below. Be careful not to misplace any of the screws or parts which are needed for installing the fixture.

2. Wiring-all wiring must take place inside junction box.

Caution: Make sure power is off at fuse or circuit breaker box. Check power wires for damage or scrapes. If power supply wires are within three inches of the ballast power supply, use wire suitable for at least 90C (194F). **Note:** Most dwellings built before 1985 have supply wire rated to 60C. Consult a qualified electrician before installing.

A. Attach gem bar (2) to junction box (not supplied) with two screws (1).

B. Attach threaded stem (4) to gem bar and secure it with the hex nut (3). Adjust threaded stem (3) in the gem bar (2) so approximately 3/4" is exposed.

C. Make all wire connections to appropriate wire. Secure with wire nuts (supplied).

D. Connect the green wires from the fixture and power source to the green screw on the gem bar (2).

E. The black wire from the fixture is connected to the black wire from power source.

F. The white wire from the fixture is connected to the white (neutral) wire from power source.


G. Tuck all connections neatly into junction box.

3. Mounting

A. Align the backpan center hole over threaded stem (4). Secure the backpan with the thumbscrew (6).

4. **Shade**-Secure the shade (7) with four screws (8).

5. Restore power at fuse or circuit breaker box.

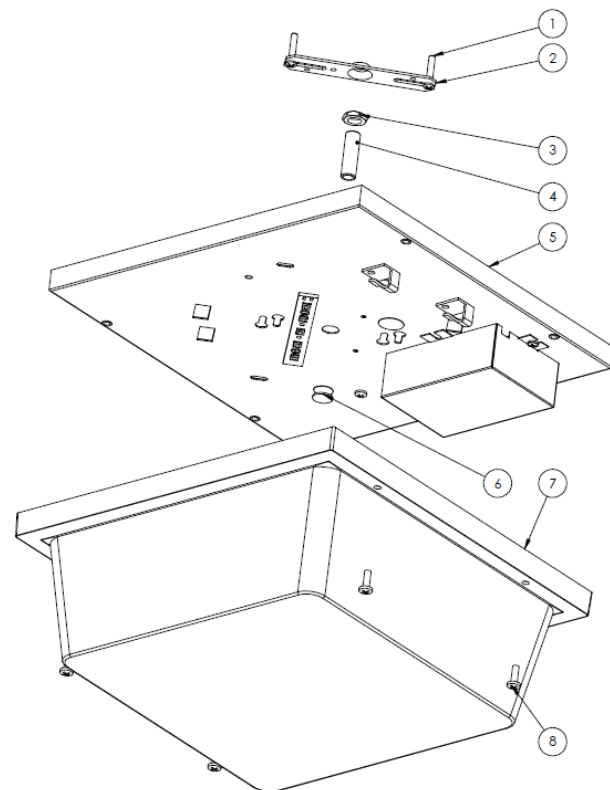

Limited Factory Warranty

American Fluorescent Corporation warrants this fixture is free from defects in materials and workmanship when installed and used under normal operating conditions for a period of 2 years from date of purchase. This warranty covers all component parts and extends only to replacement of defective fixture or components; it does not cover failure due to improper installation, misuse, mishandling or damage incurred in transit